

USERS GUIDE

ON/OFF

The Forest Lantern comes set in Test Mode. While in Test Mode, the lantern will turn on for 10 seconds before automatically turning off.
Note: The lantern cannot be manually turned off during the 10 second demonstration.

To switch to Functional Mode, press and hold the Power Switch for 10 seconds. The Battery Life Indicator **D** will flash 4 times confirming the mode has switched. You can also simply charge the lantern to switch to functional mode.

Press the Power Switch **C** once to turn the Forest Lantern on. Press it a second time to turn it off.

ADJUSTING BRIGHTNESS

Turn the Dimmer Switch **C** clockwise to increase brightness and counter-clockwise to decrease brightness.

RECHARGING

Connect the cable MICRO USB cable **F** between the MICRO USB port **E** and an external 5V USB charging source of maximum 1A. When the battery is fully charged, the three lights on the battery life indicator **D** are lit. The Battery Life Indicator **D** will begin blinking when it's time to charge your lantern.

TECHNICAL SPECIFICATIONS


LED: 5W CREE warm white
Light color: 3000 Kelvin
Lumen: max 200
Charge: 5V USB-A max 1A
Battery: 3.7V, 4400 mAh Lithium Ion
Runtime: Low: 80+h - High: up to 4h

MAINTENANCE

The lantern is designed for outdoor use under normal conditions. Dry the wet lantern thoroughly and clean it with a soft microfiber cloth. Do not disassemble the lantern. Doing so may damage the lantern and void the warranty. The use of batteries other than those recommended by Barebones will void the warranty. Use only a Barebones battery LIV-902.

COMPONENTS

- A** Carrying handle
- B** Hanging ring
- C** Power/dimmer switch
- D** Battery life indicator
- E** Micro USB port
- F** Micro USB cable

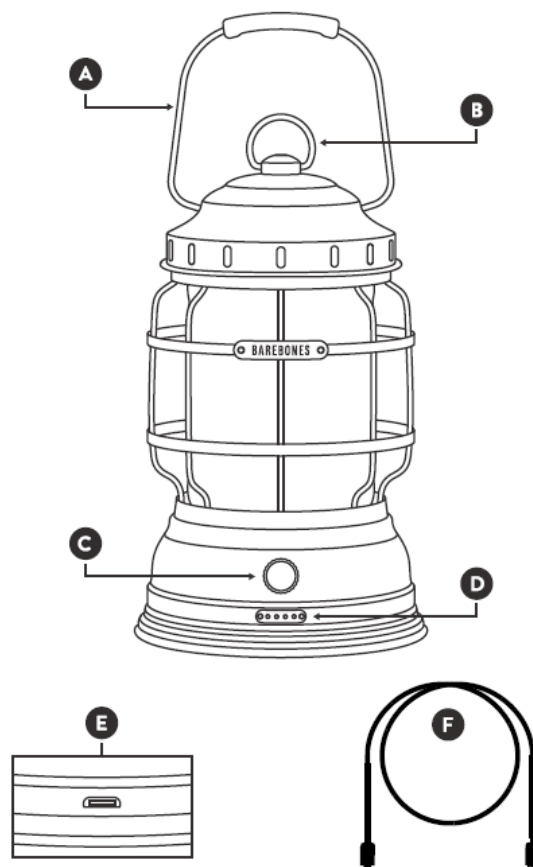

REPLACING/REMOVING BATTERY

Steps for removing/replacing Forest Lantern battery:

- Locate the battery door on the underside of the Forest Lantern.
- Use a Phillips head screwdriver to remove the 2 visible screws on the battery door.
- Pry gently from the side where the screws were taken out to remove the battery door.
- You now have access to the rechargeable battery to either be removed or replaced.

SAFETY INSTRUCTION

- This product is not intended for use by children.
- Do not remove the plastic foil from the battery pack.

ENVIRONMENTALLY FRIENDLY WASTE DISPOSAL



- Recycling - European Directive 2012-19/EU. This marking indicates that this product must not be disposed of with other household waste. In order not to endanger the environment and human health and to promote the recycling of resources, this product must be disposed of responsibly. Remove the battery pack from the device before disposal. Please hand in the used product at the designated collection points for electronic and chemical waste.

COMPLIANCE AND CERTIFICATES



WARRANTY

Barebones Living LCC provides a 2-year warranty on all defects resulting from hidden faults and which make the product unsuitable for normal use. The warranty takes effect at the time of purchase; please keep the proof of purchase carefully.

SERVICE

For more information, please see: www.barebonesliving.eu or email: service@barebonesliving.eu

Imported and distributed by:

Energy Distribution sa | rue de France 7 | 4280 Hannut | Belgium
© Barebones 2022 Barebones is a trademark of Barebones Living LLC