

USERS GUIDE

USE AS POWER SOURCE

Both USB-A **F** and USB-C **G** ports are capable of power output individually or simultaneously. Plug USB cable of external device into either corresponding USB port to automatically turn Power Bank on. External device will begin to receive power.

ON/OFF

To turn Power Bank on, click the Power Button **H** once. To turn Power Bank off, double-click Power Button **H**.

Power automatically turns on when USB cable is plugged in.

Power automatically turns off 30 seconds after removing USB cable from either port.

*Note: When not in use, cover the USB ports **F & G** with the Port Cover **C** to protect from dust and moisture.*

RECHARGE POWER BANK

Use included USB-C Cable **J**, plug into external power source. Plug USB-C Cable into USB-C Port on Power Bank. USB-C to USB-A adapter **I** included (if needed). *Fast-charge available with capable devices.

BATTERY LIFE INDICATOR

Press Power Button **H** once to show Battery Life indicator **D** levels

Note: When fully charged, all four blue lights will be solid.

LED LIGHT

To turn LED Light **B** on, hold Power Button **H** down for 2 seconds. Once LED Light **B** is on, press Power Button **H**; to cycle between low and high brightness levels. To turn LED Light **B** off, hold Power Button **H**, down for 2 seconds.

TECHNICAL SPECIFICATIONS

LED: 1,5W - warm white
 Light color: 3000 Kelvin
 Lumen: Low 20 - High 100
 Charge time: 4 h at 3A / 6 h at 2A / 12 h at 1A
 Capacity: 10.000mAh


COMPONENTS

A Carrying / hanging handle	F USB-C Port (In & Out)
B LED light	G USB-A Port (Out)
C Port cover	H Power button
D Battery life indicator	I USB-C to USB-A adapter
E Magnets for mounting	J USB-C to USB-C cable

SAFETY INSTRUCTIONS

This product is not intended for use by children. Always store your Power Bank in a cool, dry place. The operating temperature should remain between 0°C and 45°C. While charging a device, the Power Bank may become hot. This is a normal operating condition. Do not disassemble or reassemble the Power Bank. Contact Barebones if the product becomes defective. If the battery is not used for a long time, charge and discharge it every three months. Under normal conditions, the performance of the battery will deteriorate after a few years. Keep the battery away from heat and fire, and do not clean the battery with hazardous chemicals or detergents. Avoid misuse, dropping, or excessive force to reduce the risk of damage.

ENVIRONMENTALLY FRIENDLY WASTE DISPOSAL

 Recycling - European Directive 2012-19/EU. This marking indicates that this product must not be disposed of with other household waste. In order not to endanger the environment and human health and to promote the recycling of resources, this product must be disposed of responsibly. Please hand in the used product at the designated collection points for electronic waste.

COMPLIANCE AND CERTIFICATES



WARRANTY

Barebones Living LCC provides a 2-year warranty on all defects resulting from hidden faults and which make the product unsuitable for normal use. The warranty takes effect at the time of purchase; please keep the receipt carefully.

SERVICE

For more information, please see: www.barebonesliving.eu or email: service@barebonesliving.eu

