

EDISON STRING LIGHTS

User Guide

BAREBONES

QUICK USE

Your Edison String Lights are equipped with a 3-stage power switch. For low light, push switch to **LOW** indicator. For brighter light, push switch to **HIGH** indicator. To turn off, return switch to center.

| For best results use a power source with a 5V output.

KEY FEATURES



EDISON-STYLE LED BULB

2 LED: 1.6W

Light Spectrum: 3000K

- **LOW SETTING**

40 lumens / 1.2W

- **OFF**

- **HIGH SETTING**

250 lumens / 4.8W

STEEL CONSTRUCTION

3 CARABINERS FOR HANGING

10' CORD WITH VELCRO STRAP

4' SPACING BETWEEN EACH LIGHT

CERTIFICATION & COMPLIANCE

CE FCC RoHS



IPX4

OPERATING INSTRUCTIONS

POWER PENDANT

Plug your light into a USB power source.

Switch power to **LOW** or **HIGH**.

CHAINING & HANGING

Connect up to nine individual Edison lights (**EDISON PENDANT LIGHT** or **EDISON STRING LIGHTS**) using the integrated USBs. Connecting more will cause the lights to dim. When operating chained lights, the switch closest to the power source will regulate the entire line; other switches in chain should be set to high.

MAINTENANCE & CLEANING

It is unnecessary to disassemble the upper LED housing of your lights. Doing so may damage the pendant and void the warranty. Please clean your pendants periodically. If needed wipe the base with damp cloth.

WARNING

The Edison String Lights are high-intensity lights. Avoid shining light directly into eyes. This product is not intended for use by children.

BAREBONES

Customer Service

1-855-895-7040

Email

info@barebonesliving.com

091321

Scan the QR code to view this information online.



BAREBONESLIVING.COM/INSTRUCTIONS