

USERS GUIDE

PLACE THE BATTERY BEFORE USE

1. Turn the bottom cover **M** counterclockwise to unlock and open the battery compartment.
2. Keep the lantern upside down and place the battery **R** into the battery compartment. The end of the battery is marked with a symbol (-+-).
3. Replace the bottom case **M** by pressing and turning clockwise until it locks.
4. Fully charge the battery before use to achieve optimum performance.

CHARGING

Connect the lantern to the female USB-C port **P** with the included charging cable **N** with any USB charger.
Battery / Charge Indicator - LEDs indicate **Q** the battery charge status.

POWER AND BRIGHTNESS

On Turn clockwise
Dimmer Turn clockwise
Off Turn counter clockwise

TECHNICAL SPECIFICATIONS


LED: 3.2 Watt warm white Edison-style
Light color: 3000K
Lumen: Low: 35 High: 200
Input: 5V USB
Battery: 3.7V, 4400 mAh Lithium Ion
Runtime: Low: 100+h - High: 3.5h

USE AND MAINTENANCE

The lantern is designed for outdoor use under normal conditions. Dry the wet lantern thoroughly and clean it with a soft microfiber cloth. Do not disassemble the lantern. Doing so may damage the lantern and void the warranty. The use of batteries other than those recommended by Barebones will void the warranty. Use only a Barebones battery LIV-902.

COMPONENTS

A Handle/hanger	J Seeded glass globe
B Screw cap	K Protective grille
C Rubber seal	L Dimmer switch
D Metal cover	M Cover / Battery compartment
E Hexagon nut	N USB-C to USB-C cable
F Guard	O USB-C to USB-A adapter
G Central bar	P USB-C female connector
H Connector	Q Battery life indicator
I LED module	R Li-ion battery

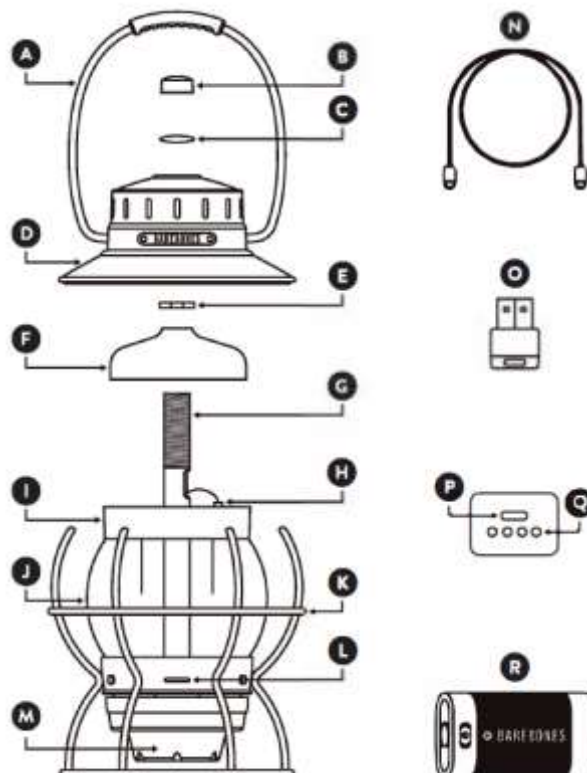

SAFETY INSTRUCTION

- This product is not intended for use by children.
- Do not remove the plastic foil from the battery pack.

ENVIRONMENTALLY FRIENDLY WASTE DISPOSAL



- Recycling - European Directive 2012-19/EU. This marking indicates that this product must not be disposed of with other household waste. In order not to endanger the environment and human health and to promote the recycling of resources, this product must be disposed of responsibly. Remove the battery pack from the device before disposal. Please hand in the used product at the designated collection points for electronic and chemical waste.

COMPLIANCE AND CERTIFICATES



WARRANTY

Barebones Living LCC provides a 2-year warranty on all defects resulting from hidden faults and which make the product unsuitable for normal use. The warranty takes effect at the time of purchase; please keep the proof of purchase carefully.

SERVICE

For more information, please see: www.barebonesliving.eu or email: service@barebonesliving.eu

Imported and distributed by:

Energy Distribution sa | rue de France 7 | 4280 Hannut | Belgium
© Barebones 2022 Barebones is a trademark of Barebones Living LLC